



The **BREWBUILD** SYSTEM

www.brewbuild.co.nz · nzbrewbuild@gmail.com

How to install your weldless thermometer

Parts supplied - diagram 1

Weldless Thermometer (1) Stainless washer, (2) high temperature O ring, (3)
stainless O ring lock nut (4)


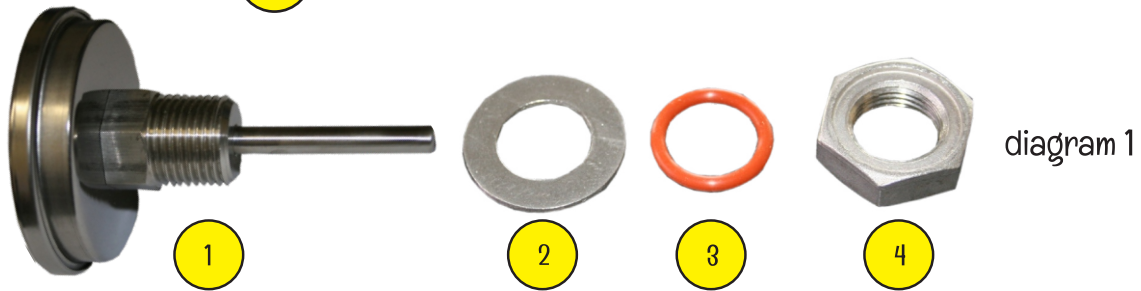


diagram 1

Installation

1. Mark your kettle where you would like the centre of the weldless thermometer to be installed
2. Cut a 7/8" hole in the kettle using a chassis punch, or step drill bit, do not cut the hole too large or the O ring will not seal correctly and you run the risk of leaks.
3. File the edges of the hole and clean with abrasive paper to remove any sharp edges or burrs.
4. Fit the components as shown in diagram 2 and tighten the locking nuts. DO NOT overtighten so that the O ring is squashed flat or leaks will occur.
5. Fill the kettle with water to above the thermometer and check for any leaks.

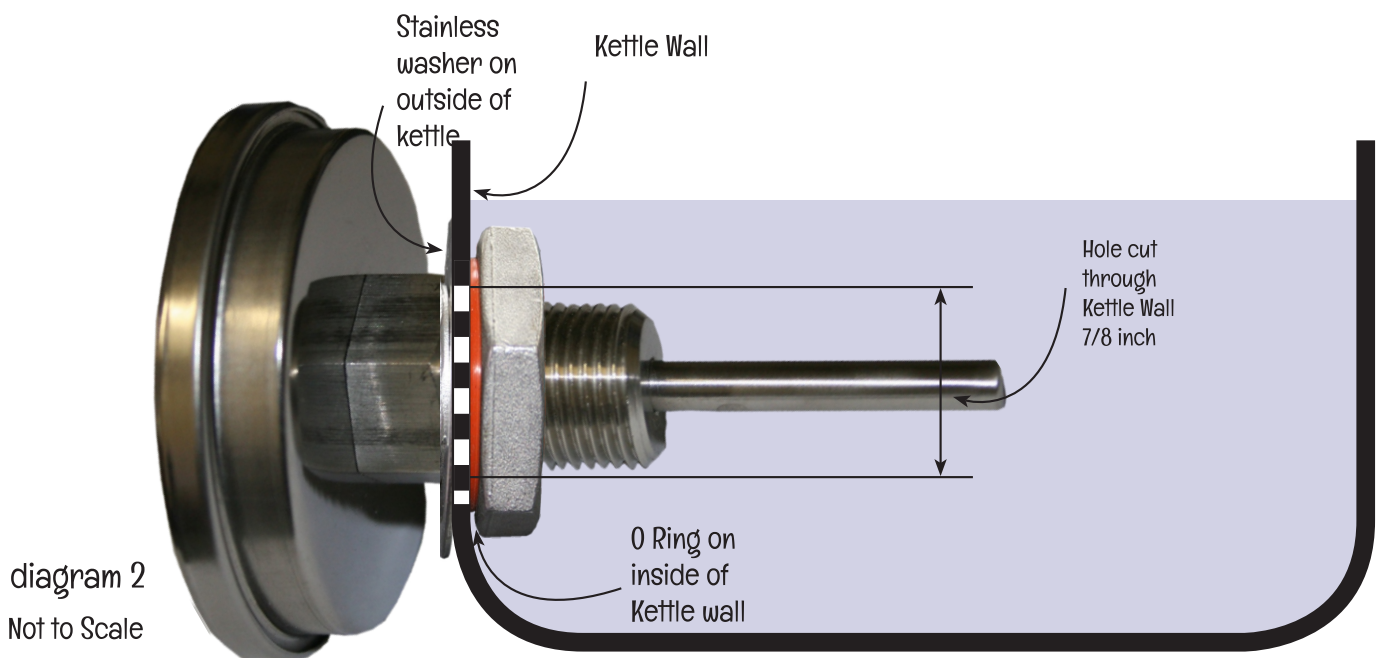

www.brewbuild.co.nz · nzbrewbuild@gmail.com